



TESLA

MODEL Y MUD FLAP KIT INSTALLATION

TROUSSE D'INSTALLATION DE BAVETTE
GARDE-BOUE POUR MODEL Y





Preparing for Installation

The Mud Flap Kit is designed to provide added protection against rocks and small road debris that can accelerate elemental wear and tear on your vehicle's body and paint. If you drive on roads where heavy salt, sand, or gravel are commonly used to improve winter road conditions, installing this kit is the recommended way to protect your vehicle.

What's in the Box?



1. Left mud flap
2. Right mud flap
3. Push clips (x4)

Required Tools

- Push clip removal tool or flathead screwdriver




Perform the following to install the mud flap:

1. Clean the installation area with alcohol and allow to fully dry before installation.
2. Turn the steering wheel fully to the left to provide access to the working area.




3. Carefully use a push clip removal tool or flathead screwdriver to remove the lower push clips (x2) that secure the front wheel arch liner. Discard the push clips.

⚠ Caution: Discard the existing push clips. Do not use the existing push clips to install the Mud Flap Kit.

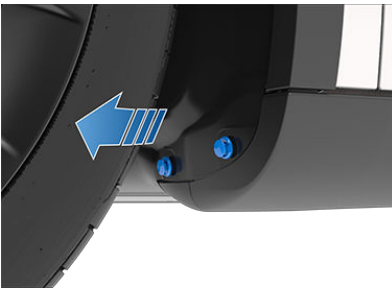


4. Maneuver the mud flap in place so that the tabs on the mud flap hook onto the backside of the front fender garnish. Make sure that the mud flap is aligned correctly with the holes in the front wheel arch liner and body of the vehicle.

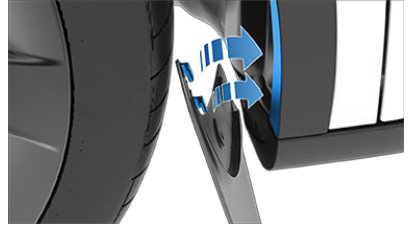


5. Install the opened (plastic rivet pulled out) new push clip into the inboard hole, and then push the plastic rivet in to close the push clip.

Note: Make sure to install the inboard push clip first.

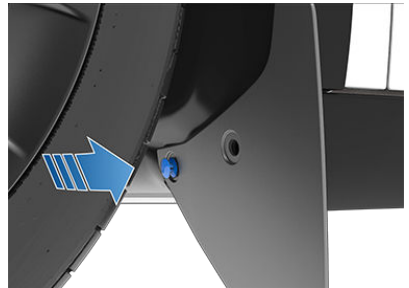

6. Install the opened (plastic rivet pulled out) new push clip into the outboard hole, and then push the plastic rivet in to close the push clip.

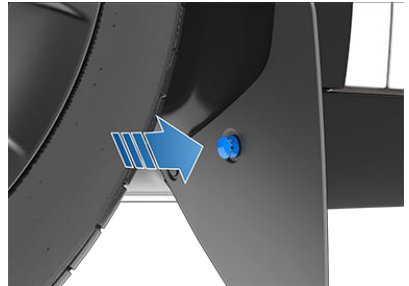

7. Perform this procedure again on the right side of the vehicle to install the right mud flap.

Note: This procedure and illustrations detailed how to install the left mud flap. Instructions for the right side are mirrored.



Préparation à l'installation

L'ensemble de bavettes garde-boue procure une protection accrue contre les roches et autres petits débris de route qui pourraient accélérer l'usure de la carrosserie et de la peinture de votre véhicule. Si vous empruntez des routes où le gros sel, le sable et le gravier sont fréquemment utilisés pour améliorer les conditions routières hivernales, nous vous recommandons d'installer cet ensemble afin de protéger votre véhicule.

Qu'est-ce qu'il y a dans la boîte?



1. Bavette garde-boue gauche
2. Bavette garde-boue droite
3. Attache-poussoirs (4)

Outils requis

- Retire attache-poussoirs ou tournevis plat




Suivez les instructions suivantes pour installer la bavette garde-boue :

1. Nettoyez la zone d'installation avec de l'alcool à friction et assurez-vous qu'elle est bien sèche avant de procéder.
2. Tournez le volant complètement vers la gauche afin d'avoir un meilleur accès à la zone de travail.




3. Utilisez, avec précaution, un retire attache-poussoirs ou un tournevis plat pour retirer les attache-poussoirs (2) qui retiennent la doublure d'aile. Jetez les attache-poussoirs.

⚠ Avertissement : Jetez les attache-poussoirs existants. N'utilisez pas les attache-poussoirs existants pour installer l'ensemble de bavettes garde-boue.

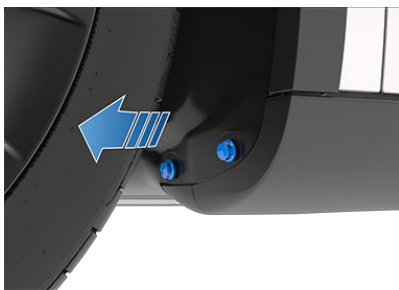


4. Installez la bavette garde-boue de façon à ce que ses onglets s'accrochent à l'arrière de la garniture de l'aile avant. Assurez-vous de bien aligner la bavette garde-boue avec les trous dans la doublure d'aile avant et la carrosserie du véhicule.

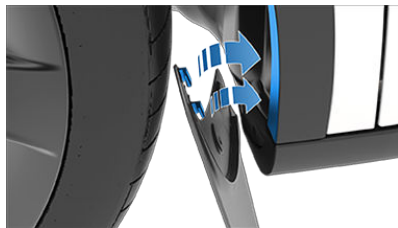


5. Installez le nouvel attache-poussoir ouvert (rivet de plastique tiré) dans le trou intérieur, puis insérez le rivet de plastique pour refermer l'attache-poussoir.

Remarque : Assurez-vous d'installer d'abord l'attache-poussoir intérieur.

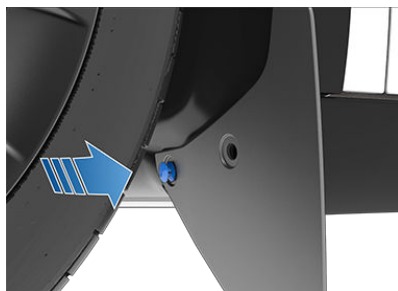

6. Installez le nouvel attache-poussoir ouvert (rivet de plastique tiré) dans le trou extérieur, puis insérez le rivet de plastique pour refermer l'attache-poussoir.

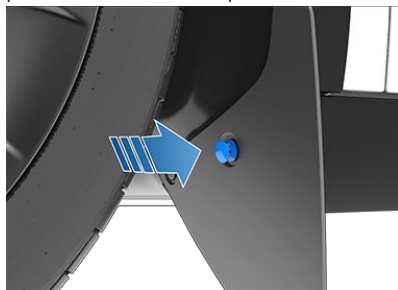

7. Recommencez cette procédure du côté droit du véhicule pour installer la bavette garde-boue de droite.

Remarque : Cette procédure et les illustrations expliquent en détail comment installer la bavette garde-boue de gauche. Les instructions pour le côté droit sont inversées.

P/N: 1656827-00-A

TESLA